

PLASMA PARTS-PT-60/80/100 (Compatible)

PT-60®



PART NO

REF

DESCRIPTION

1	PT-60-TB	09603	Torch Body
2	PT-60-TB (H)	09603 (H)	Torch Head (Only the Head) w/o Handle, Switch & Front end parts
3	PT-60-EL	52582	Electrode Back Striking
4	PT-60-TP-1.0	51313P.10	Tip 1.0 mm
	PT-60-TP-1.1	51313P.11	Tip 1.1mm
5	PT-60-SR	60028	Swirl Ring
6	PT-60-SC	PC0116	Shield Cup
7	PT-60-DPS	60432	Double Pointed Spacer

PT-100®



PART NO

REF

DESCRIPTION

31	PT-100-TB	09700	Torch Body for PT-100
32	PT-100-EL	52556	PT-100 Electrode, Back Striking
33	PT-100-CT-1.0	51246.10	PT-100 Tips x 1.0 mm
39	PT-100-CT-1.3		PT-100 Tips x 1.3 mm
40	PT-100-CT-1.5	51248.15	PT-100 Tips x 1.5 mm
34	PT-100-SR-1	60025	PT-100 Swirl Ring , 30-70A
35	PT-100-SR-2	60026	PT-100 Swirl Ring,80-120A and Gouging
36	PT-100-RC-1	60500	PT-100 Retaining Cap, 30-70A
37	PT-100-RC-2	60501	PT-100 Retaining Cap, 80-120A
38	PT-100-DPS	60444	PT-100 Double Pointed Spacer

PT-80®



PART NO

REF

DESCRIPTION

11	PT-80-TB	09800	Hand Torch Head
12	PT-80-TB (H)		Torch Head (Only the Head) w/o Handle, Switch & Front end parts
13	PT-80-FH	09705	Handle c/w Switch
14	PT-80-EL	52558	Electrode Back Striking
15	PT-80-CCT-0.9	51310.09	Contact Cutting Tip 0.9 30-40A Back Striking
22	PT-80-CT-1.0	51311.10	Cutting Tip P-80,1.0 mm,40-50A Back Striking
23	PT-80-CT-1.3	51311.13	Cutting Tip P-80,1.3 mm,70-80A Back Striking
16	PT-80-SCH	60504	Shield Cap Hand
17	PT-80-OR	5162060	O Ring
18	PT-80-RC	60510	Retaining Cap
19	PT-80-SCB	60511	Shield Cup Body
20	PT-80-CT	0980042	Cooling Tube
21	PT-80-DPS	60434	Double Pointed Spacer
24	PT-80-SR		Swirl Ring